

APC220 Radio Data Module

2008-09-22

Version: 1.2

Introduction


This APC220 is a highly versatile, low power radio solution that is easy to setup and integrate into any project requiring a wireless RF link.


It is perfect for robotic application which gives you a wireless control. You can connect one of these modules with your MCU through TTL interface. And connect your PC with another APC220 module through a TTL/USB converter

Specification

Working frequency: 431 MHz to 478 MHz Power: 3.3-5.5V Current: <25-35mA Working temperature: -20°C ~ +70°C Range: 1200m line of sight (1200 bps) Interface: UART/TTL Baud rate: 1200-19200 bps Baud rate (air): 1200-19200 bps Receive Buffer: 256 bytes Size: 37mm × 17 mm × 6.6mm Weight: 30g

Pin Definition

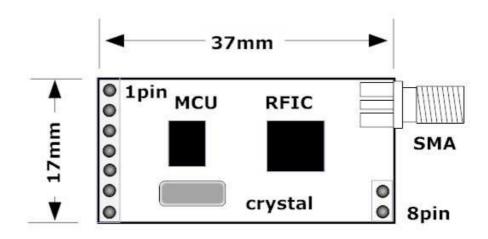

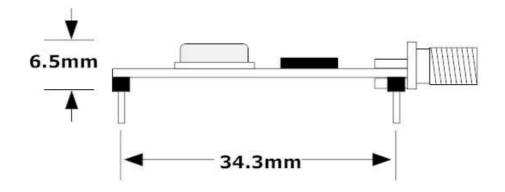

Pin	Definition	Detail
1	GND	0V Ground
2	VCC	3.3V-5.5V Power
3	EN	Enable the device when leave it disconnected or apply >1.6V
		Disable the device when apply <0.5V
4	RXD	UART RX
5	TXD	UART TX
6	AUX	UART Signal- Receive (low) Transmit (high)
7	SET	Set parameters (low)

Default Setting

Baud Rate: 9600 bps Bits: 8 Parity: None Stop bit: 1 RF Frequency: 431 MHz Air Rate: 9600 bps Output Power: 20mw

Connection

• Connect APC220 to PC

To connect APC220 to PC, a TTL to RS232 or TTL to USB converter is required.

UART/TTL TO RS232


Ο GND 3.3 – 5.5V PC Ο VCC TTL TO RS232 Ο EN Ο RXD TX(RS232) TX(RS232) TXD Ο TXD RX(RS232) RX(RS232) RXD Ο AUX SET Ο PC


APC220 Module

Figure: Connect APC220 to PC via RS232-TTL converter

• Connect APC220 to MCU

 Any MCU which has TTL port is able to talk to APC220. A diagram is shown below for easy connection.

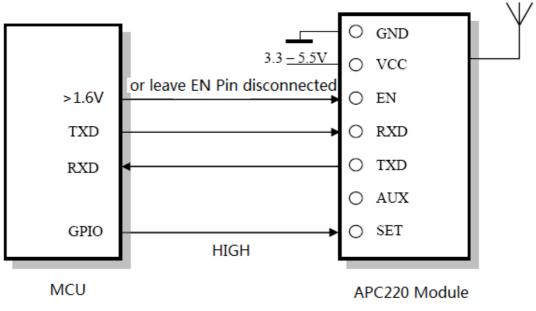



• Connect PC to MCU via APC220

To connect PC with MCU via APC220, a RS232-TTL or USB-TTL converter is required.


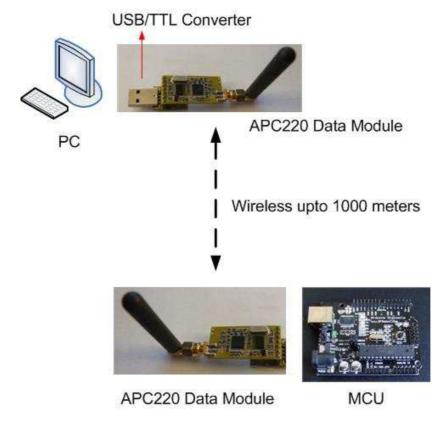


Figure: Connect PC to MCU via APC220

• Connect PC to PC via APC220

To connect PC to PC via APC220, two USB-TTL or RS232-TTL converters are required. A diagram is illustrated below.

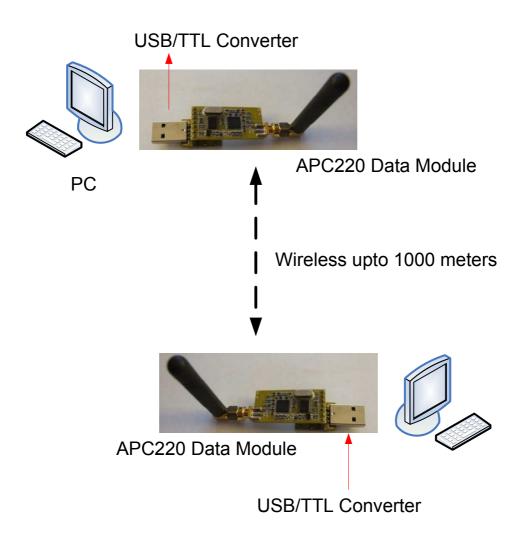

Tutorials:

Help

If you have any questions or difficulty in using this module, please leave your question and problems at

http://www.yerobot.com/forum/